

Wiring Diagram

Wiring Nokeval 201/301/302 Loop-Powered Displays DMT143 and DMT152 Dew Point Transmitters





This document provides wiring examples for connecting Vaisala transmitters with 4 ... 20 mA current signal to Nokeval 201, Nokeval 301, and Nokeval 302 loop-powered displays.

For instructions on how to configure display scaling and other functions (such as relays and alarms), refer to the documentation that is delivered with the display. Manufacturer's documentation is also available from www.nokeval.com.

DMT143 transmitter with Nokeval 201/301/302 display

DMT143
analog connector
4 ... 20 mA output

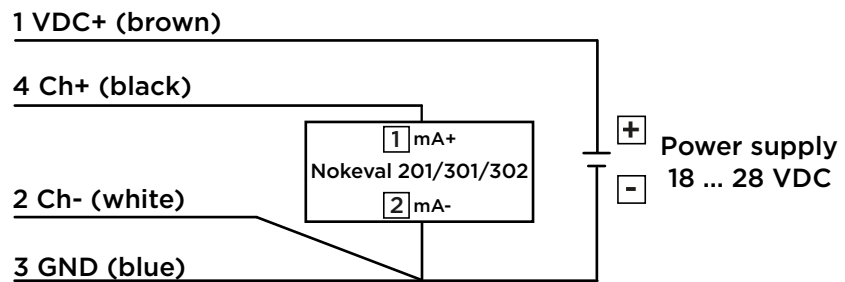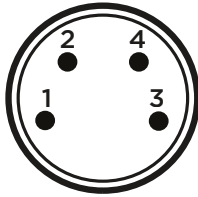

DMT152 transmitter with Nokeval 201/301/302 display

DMT152
analog connector
4 ... 20 mA output

